

Lumberjack Cutter

PITSCO
E D U C A T I O N

User Guide

Using the Cutter

Caution: The Lumberjack has two safety bars to prevent accidental cuts. However, keep fingers out from under the end of the cutter arm to prevent pinching.

The Lumberjack is very straightforward and easy to use. For a straight cut, simply align a balsa wood stick against the ruler and slide the stick where you wish to cut it under the blade, which is aligned with the 90-degree line. Pull down the cutter arm.

To cut a stick to an angle, carefully align the stick on that angle measurement's mark and align the stick where you want it cut. Pull down the cutter arm.

Changing the Blade

Caution: Be very careful when handling razor blades. Dispose of the dull blade properly.

1. Using a 1/16" hex key (not included), carefully loosen and remove the two screws that hold the Lumberjack's blade in place. Set the screws aside for later. Remove the blade from the groove in the cutter's arm; dispose of the blade.
2. Center the new blade between the screw holes. Holding it in place, carefully use the two screws you set aside earlier to fasten the new blade to the cutter. Do **not** overtighten the screws.

PITSCO
E D U C A T I O N

P.O. Box 1708 • Pittsburg, KS 66762
www.pitsco.com
Toll-Free Orders 800-835-0686

Lumberjack Cutter User Guide 59918 V0211

Lumberjack Cutter

PITSCO
E D U C A T I O N

User Guide

Using the Cutter

Caution: The Lumberjack has two safety bars to prevent accidental cuts. However, keep fingers out from under the end of the cutter arm to prevent pinching.

The Lumberjack is very straightforward and easy to use. For a straight cut, simply align a balsa wood stick against the ruler and slide the stick where you wish to cut it under the blade, which is aligned with the 90-degree line. Pull down the cutter arm.

To cut a stick to an angle, carefully align the stick on that angle measurement's mark and align the stick where you want it cut. Pull down the cutter arm.

Changing the Blade

Caution: Be very careful when handling razor blades. Dispose of the dull blade properly.

1. Using a 1/16" hex key (not included), carefully loosen and remove the two screws that hold the Lumberjack's blade in place. Set the screws aside for later. Remove the blade from the groove in the cutter's arm; dispose of the blade.
2. Center the new blade between the screw holes. Holding it in place, carefully use the two screws you set aside earlier to fasten the new blade to the cutter. Do **not** overtighten the screws.

PITSCO
E D U C A T I O N

P.O. Box 1708 • Pittsburg, KS 66762
www.pitsco.com
Toll-Free Orders 800-835-0686

Lumberjack Cutter User Guide 59918 V0211