

Fog Maestro

Maintenance Kit

Includes a set of generator shims, polishing pad, and bottle to hold denatured alcohol. To clean your Fog Maestro, fill the bottle and use the kit by following the instructions that follow.

Cleaning the Fog Maestro

When the Fog Maestro's trigger is difficult to squeeze or when the fog's volume decreases, it's time to clean the brass shim inside the Fog Maestro.

Note: Don't clean the shim when the Fog Maestro is hot. As the unit cools, the screws on the plate will loosen.

Clean the shim as follows:

1. Unplug the power cord on the Fog Maestro from the electrical outlet. Remove the three screws from the top shield of the Fog Maestro with a small Phillips screwdriver and remove the cover.
2. Using a 7/64" hex wrench, remove the six screws from the top plate and lift the plate off.
3. A thin, brass shim lies underneath the top plate. The shim is made of three thin layers of brass. Carefully remove this shim and take the three layers apart (you might need to carefully pry them apart with a hobby knife or similar object).
4. Using the denatured alcohol and polishing pad, rub the residue off the three layers.



Step 1



Step 2




Step 3



Step 4

- When they are clean, place the three layers back on the Fog Maestro in the same order they came off (shown in order, from left to right, is the bottom, middle, and top layer of the shim). Put the plate on top of the shim and tighten the screws back into place (do not overtighten).
- Replace the shield cover and screw it onto the Fog Maestro.

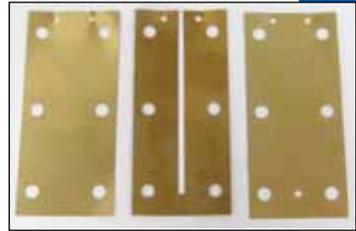

Step 5

back



Step 6

PITSCO

E D U C A T I O N

P.O. Box 1708 • Pittsburg, KS 66762
800-835-0686 • shop.pitsco.com

Fog Maestro Maintenance Kit User Guide 59801 V0311